Low-Speed Centrifuge

416

User's Manual

Gyrozen Co., Ltd.
B-station, 30-12 Gyeryong-ro 141, Yuseong-gu, Daejeon 305-301, Korea
Tel: +82-42-719-8200 Fax: +82-42-826-9848
www.gyrozen.com

DOC. No.: C01DC00204-11

GYROZEN

Designed to suit your exact needs

Wide range of modern centrifuges for a wide variety of laboratory applications

THE BEST FUNCTIONAL QUALITY

- Manufactured and tested to IEC standards, stable spinning operation within +/-2% variation
- Steady and soft deceleration with dynamic brake technology
- Low noise level with unique internal air flow design that protects heating of samples
- Automatic recognition and alarms for imbalance, over-speed and over-heat
- Automatic RPM/RCF conversion

SAFETY and ROBUSTNESS

- Double laminated ABS/Steel door construction minimizes noise and heat transmissions
- Safety door lock mechanism ensures the door is locked whilst in operation mode
- Unique door-drop protection protects the operator and samples when loading and unloading
- Automatic detection and alarms for imbalance, excess speed and heating
- Automatic door-open scheme with safety level of aperture depth not to damage operators
- Emergency door-lock release helps to open the instrument when power blackout or sudden stoppage occurs
- The Aerosol tight buckets and rotors prevent contamination and ensures safety
- Autoclavable and corrosion resistant rotors ensure safety and long life
- High-quality cabinets with scratch resistant powder coated finish

EASY CUSTOMIZATION

- Any rotors, sample containers, and adaptors can be manufactured according to customer's specification
- Flexibility of including any additional functions or programs in need

CONVENIENCE IN OPERATION

- Intuitive touch button with easy to follow controls
- Easy to read LCD display
- Automatic RPM/RCF conversion for prompt detection of g-force
- Easy to check actual rpm through the top window of door
- Program memory for up to 10 programs
- Automatic door-opening function when rotor is static, for easy retrieval of samples
- A large assortment of rotors, fixed angle or swing-out with buckets and adaptors

PATENTED TECHNOLOGIES

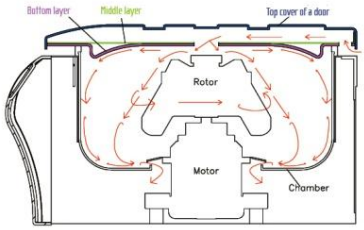

Unique efficient air-cooling flow to reduce spinning frictions so that the temperature increase and noise are minimized

ECO-FRIENDLY MANUFACTURING

- Dust free AC induction motor
- Eco-safe refrigerant, R404a
- Very quiet operation at lesser than 56

CONTENTS

Page #

1. Meanings of Symbols & Safety Precautions 6

1-1 Meanings of Symbols 6

1-2 Safety Precautions 7

2. Product Description & Technical Specifications 9

2-1 Product Description 9

2-2 Technical Specification 10

3. Unpacking 11

4. Installation 11

4-1 Power on/off and Door Release 11

4-2 Rotor coupling and disassembling 12

4-3 Positioning of Sample Tubes 14

5. Operation 15

5-1 Key Functions of Control Panel 15

5-2 Setting RPM/RCF 15

5-3 Setting Time 16

5-4 Start/Stop 17

5-5 SOFT Start/Stop 17

5-6 Program Saving & Recalling 18

5-7 Emergency Door Open 19

5-8 Fuse replacement 19

6. Maintenance 20

6-1 Outer part of instrument 20

6-2 Chamber 20

6-3 Shaft 20

6-4 Rotor 20
6-5 Transportaion of the instrument 20

7. Trouble Shooting 21
7-1 Check list 21
7-2 Error Code 22

8. Rotors & Accessories 24

9. Product Range 27

10. CE 28

1. Meanings of Symbols & Safety Precautions

1-1. Meanings of Symbols

1-1-1. Symbols on the device

Symbol	Meaning	Symbol	Meaning
	Attention and warning.		Attention and warning for electric shock
	Attention and warning for rotor coupling.		Attention and warning for door opening and closing
	Attention and warning for correct way of sample balancing in the rotor.		Attention and warning for correct way of buckets position.
	Indicate a hole for manual door opening in case of emergency		

1-1-2. Symbols in this document

Symbol	Meaning	Symbol	Meaning
	This symbol refers to safety relevant warnings and indicates possible dangerous outcomes.	☞	Note. This symbol refers to the important reminder.

1-2. Safety Precautions

Before using the instrument, please read this operation manual to ensure correct usage through understanding. Incorrect handling of the instrument could possibly result in personal injury or physical damage on the instrument or its accessories.

1. ALWAYS locate the instrument on a flat, rigid and stable table capable of withstanding the weight of the instrument and its spinning operation.

2. ALWAYS make a safety zone of 30 cm around the centrifuge to indicate that neither hazardous materials nor persons should be permitted within the area during operation.

    - ✓ ALWAYS position the instrument with enough space on each side of instrument to ensure proper air circulation.

3. ALWAYS install the instrument within a temperature and humidity controlled environment. (Permissible ambient temperature: +5 °C~ +35 °C, Relative humidity: ≤ 85%)

4. Before connecting the power, check the rated voltage.

5. Should not use unapproved rotors and accessories.

    - ✓ Only use rotors from Gyrozen Co., Ltd. with appropriate centrifugal tubes and suitable adaptors to embrace sample containers tightly enough inside rotors.

6. Before operating the instrument, check if the rotor and the rotor lid are securely fastened.

    - ✓ Should operate the instrument with a rotor properly installed and secured to the motor shaft.

7. Mount the rotor on the motor shaft properly, check it with spinning manually.

8. Do not stop the rotor by touching with hand during the instrument is running.

9. Emergency door open should be performed only when spinning is completely stopped.

10. Should not exceed the rated speed or specific gravity. Samples whose density is greater than 1.2g/ml must have reduced maximum rotational speed to avoid rotor failure.

11. The sample content should not exceed 80% of total capacity of a tube. Otherwise, it would cause spillage of sample fluid and even the tube breakage.

12. ALWAYS load the tubes symmetrically with evenly weighted samples to avoid rotor imbalance. If necessary, use the water blank to counterbalance the unpaired sample.

13. The operation speed should not exceed the highest value of the individual guaranteed g-forces of each centrifuge, rotor, bucket or adaptors and sample container, especially the guaranteed g-force

of sample container should not be neglected.

14. The rotors should be cleaned and kept dry after every use for longer life and safety.

15. ALWAYS disconnect the power supply prior to maintenance care and service to avoid electrical shock.

16. ALWAYS use proven disinfection procedures after centrifuging biohazardous materials.

17. Should not centrifuge flammable, toxic, radioactive, explosive, or corrosive materials.

18. When it is necessary to use toxic or radioactive materials or pathogenic micro-organisms which belong to the Risk Group Ⅱ of WHO: "Laboratory Bio- safety Manual," should follow national regulations.

- ✓ Do not place dangerous materials within 30 cm distance around the instrument, and that is also recommended by IEC 61010-2-020.
- ✓ Use the emergency door open function only when the door button on the control panel is dumb under the condition of complete stop of rotor running.
- ✓ Never try to open or move the instrument if it is not completely stopped.
- ✓ If the power input is more than +/- 10% of the recommended voltage or fluctuates frequently, it may cause malfunction of the instrument and often result serious damage.
- ✓ Install the instrument at the place without any kinds of corrosive gases.

2. Product Description & Technical Specifications

2-1. Product Description

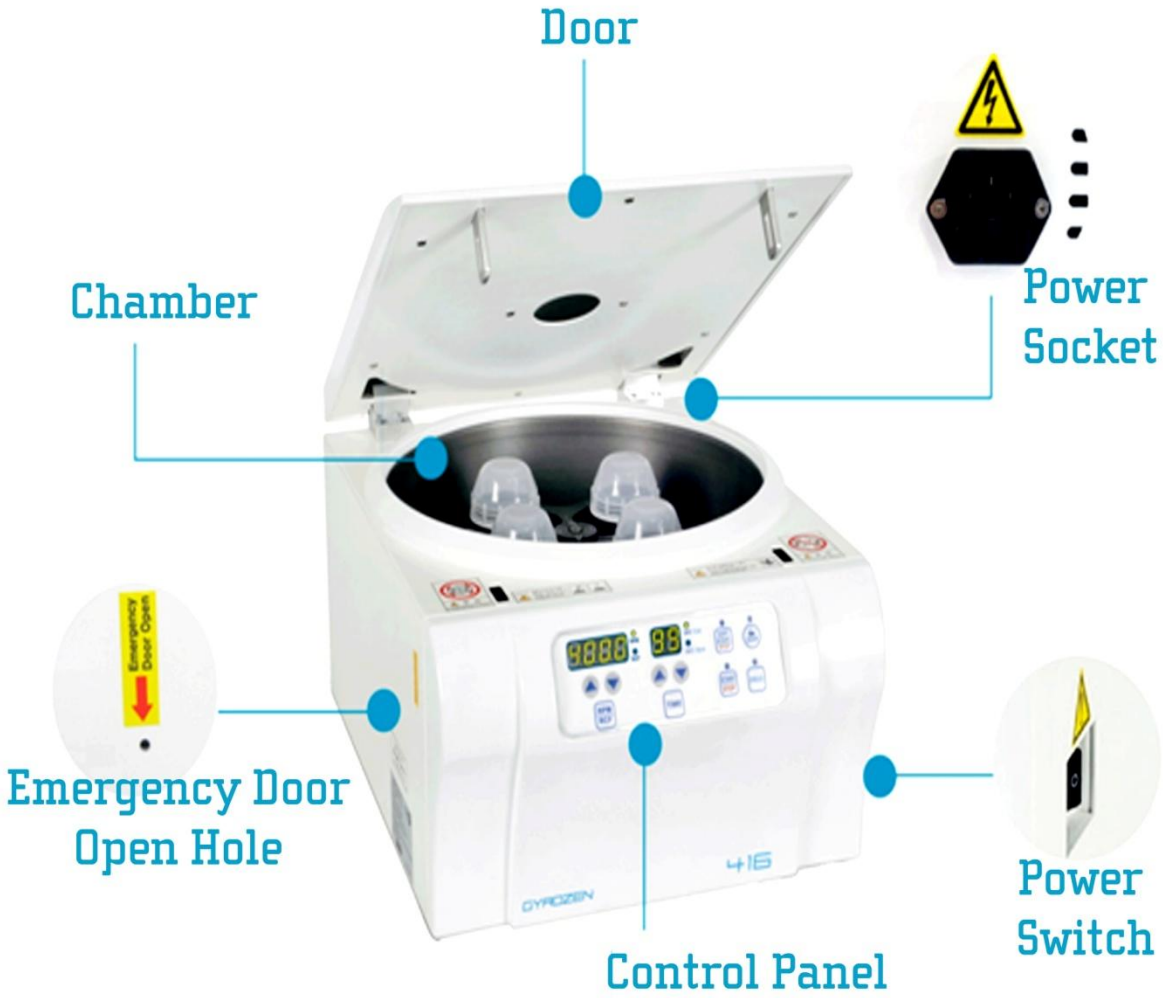

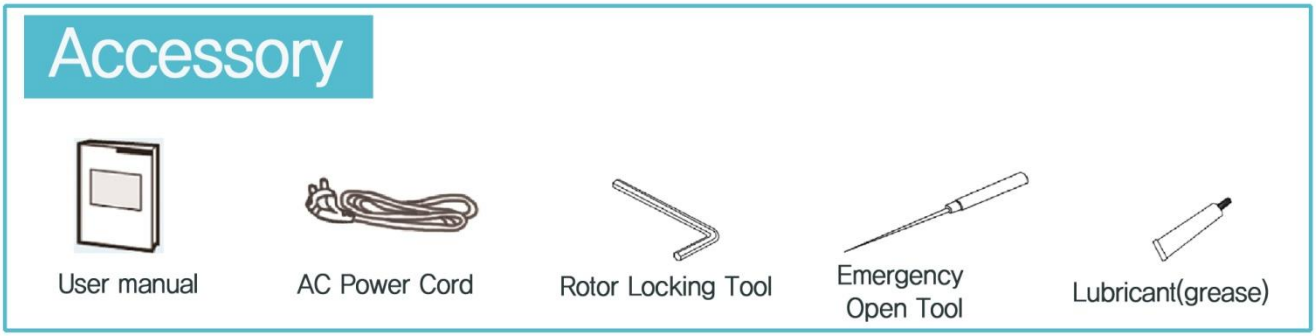

2-2. Technical Specifications

Max. RPM/RCF		4,000 rpm / 2,700 xg
Max. capacity	Fixed angle	16 x 15 ml
	Swing out	4 x 100 ml
Time control		Timed < 100 min or continuous
RPM/RCF conversion		Yes
Noise level(dB)		≤52
Acc/Dec(sec)		≤20 / ≤25
SOFT start/stop		Yes
Program memory		10
Imbalance cutout		Yes
Safety lid lock		Yes
Lid drop protection		Yes
Automatic door release at completion		Yes
Power supply(V/Hz)		220/50~60 (110V optional)
Power requirement(VA)		300
Dimension(W x D x H, mm)		375 x 480 x 260
Weight without rotor (Kg)		19.5
CE mark		Yes
Cat. No.		GZ-416

☞ This instrument has following functions for safety.

1. SOFT spin key for gentle acceleration and deceleration.
2. Automatic detection and alarms for imbalance, excess speed and heating.

3. Unpacking

Motor Protecting Devices (2 ea of screw bolts) are installed at the bottom of each instrument for keeping the motor on place. As depicted in the following pictures, the length of one bolt in the front bottom is longer than the instrument's feet for operator in order to recognize the wobbly status. These bolts and nuts should be removed before the installation of the instrument.

1. Open the box and lift out the instrument carefully.
2. Place the instrument on the solid and flat table.
3. To disassemble the Motor Protecting Devices, use the additionally supplied 6mm wrench.

   ( ) and unscrew and remove all 2 bolts. It is now ready for installation.

☞ Place the instrument on the solid and flat table.

4. Installation

4-1. Power On/Off and Door Release

Action

4-1-1. Power On/Off

1. Connect the AC Power cord at the power socket on the right back of the instrument.
2. Turn on the instrument by pressing a switch on the right side of the instrument.
3. Press the 'Door' button to open the door.

4-1-2. Door Release

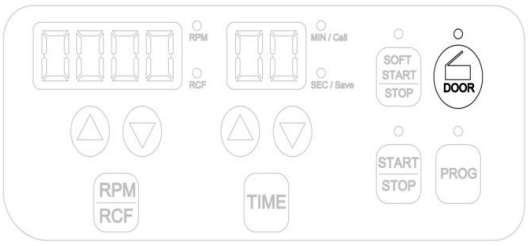

1. For opening the door, press the [DOOR] button.
   - ➢ The door is automatically opened after completion of spinning with beeping sound.
   - ➢ Close the door until hearing clank shut.
   - ➢ When the door is opened, the door LED turns on.

☞
- ✓ The door is not opened while the instrument is running.
- ✓ If the door is opened, the instrument could not operate even with pressing the 'Start' button.
- ✓ Power Failure: If there is any power failure during operation, door is not opened with 'Door' button. Door can be opened only when the operation is completely stopped and the power is on again. If you want to open the door at the power failure, please refer to '5-7. Emergency Door Open'.

4-2. Rotor Coupling and Disassembling

Action

1. Before coupling a rotor, clean the motor shaft and chamber with soft dry towel.

4-2-1. Swing-Out Rotor

2. Mount a proper rotor into the motor shaft.
3. Grasp the rotor with one hand, and place Rotor Locking Tool at the center hole of the rotor.
   - ➢ To assemble the rotor: Rotate the Rotor Locking Tool clockwise until tightly assembled.
   - ➢ To disassemble the rotor: Rotate the Rotor Locking Tool counterclockwise

4. Hang the appropriate buckets into the rotor.
   - ➢ Load the identical bucket at each wing for safety. (Do not leave a vacant wing without bucket. All wings should hold identical bucket.)

- Remove dirt and dust around hooks of rotor and hanging part of bucket.

5. Spin the rotor manually to check if bucket swinging is free enough and ever. If they do not swing freely, apply the Lubricant (grease) to the link area.

4-2-1. Fixed Angle Rotor

2. Mount a proper rotor into the motor shaft. Put the Washa ( ) at the center hole of the rotor and assemble it with the Door Locking Nut ( ).
    - To assemble the rotor: Rotate the Door Locking Nut clockwise until tightly assembled.
    - To disassemble the rotor: Rotate the Door Locking Nut counterclockwise.

3. Load the 15ml stainless steel sleeves at every hole.

- ✓ When you couple the rotor at first installation, you turn off the instrument.
- ✓ After coupling the rotor, turn on the instrument.

4-3. Positioning of Sample Tubes

Action

1. Before loading sample tubes, check the water drop or dirt in the rotor hole or inner adaptor.
   - ➢ If there is a water drop or dirt in the rotor hole or inner adaptor, remove it with soft dry cloth.
2. Tubes should be placed in the rotor with same amount of samples and at symmetrical positions.
   - ➢ Only use appropriate centrifugal tubes and do not exceed the speed beyond the tube's max. g-force.
   - ➢ For safety, fill the sample for 70~80% in the tubes.

Correct Way of Sample Balancing and Tube Usage

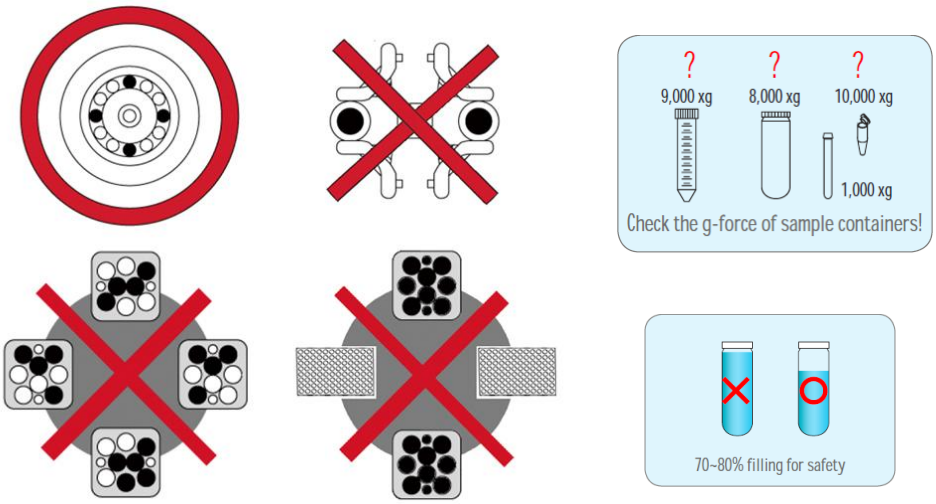

✓ If the number of samples is not in pair, please load the control tubes at each symmetrical position. Otherwise, it results noise and vibration, which eventually damage the instrument.

☞ For safety, the 'Imbalance Cut Off' function will be occurred, if there is imbalance of loading tubes (Error 8, Imbalance error). Please refer to 7. Trouble Shooting.

5. Operation

5-1. Key Functions of Control Panel

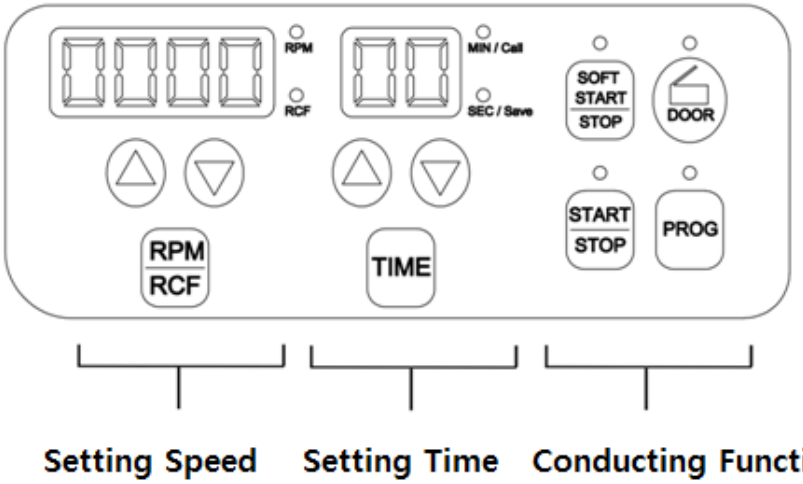

Setting Speed

☐ RPM/RCF For automatic conversion of RPM/RCF and to set the speed

Setting Time

☐ TIME Use to set time, available range up to 99 min (0:00:00: continuous)

Setting Function

☐ PROG Use to save a set of setting values or recall the saved program number

☐ START/STOP Use to start or stop operation

☐ Door Use to open the instrument lid

☐ Soft Start/Stop For gentle acceleration and deceleration (Forced only by natural gravity force)

5-2. Setting RPM/RCF

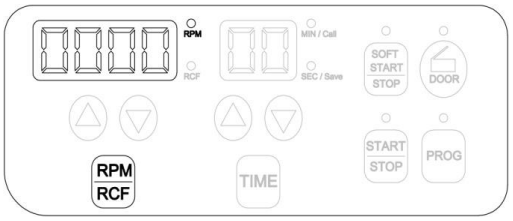

▶ Maximum RPM/RCF: 4,000 RPM/ 2,700 x g

Action

5-2-1. Setting RPM

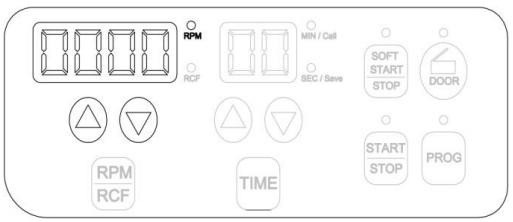

▶ Speed setting unit: 10 rpm or 100 rpm

1. Press a [RPM/RCF] button once.
   - ➢ RPM MODE is generated by pressing a [RPM/RCF]

button once.

2. Press the [▲▼] buttons to change input value.
   - ➢ After keeping holding finger on the [▲▼] buttonsfor 5 seconds, the unit of setting value is changed to rpm from 10rpm.
3. Press the [RPM/RCF] button again for saving.

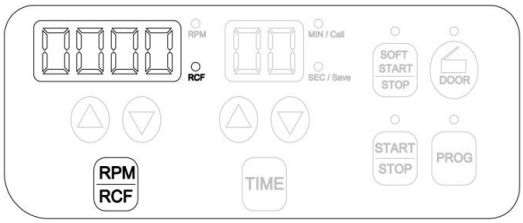

5-2-2. Setting RCF

▶ Speed setting unit: 1 rcf or 10 rcf

1. Press a [RPM/RCF] button twice.
   - ➢ RCF MODE is generated by pressing a [RPM/RCF] Button twice.
2. Press the [▲▼] buttons to change input value.
   - ➢ After keeping holding finger on the [▲▼] buttons for 5 seconds, the unit of setting value is changed to 10 rcf from 1 rcf.
3. Press the [RPM/RCF] button again for saving.

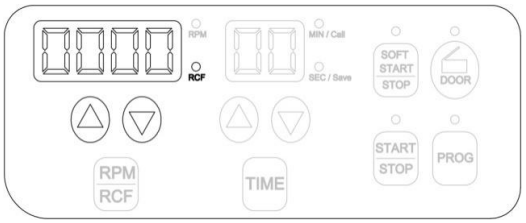

5-3. Setting Time

▶ Speed setting unit: 1min. or 10min./ 1 sec. or 10 sec

Action

5-3-1. Setting MIN

1. Press the [TIME] button once.
   - ➢ Minutes MODE is generated by pressing a [TIME] Button once.

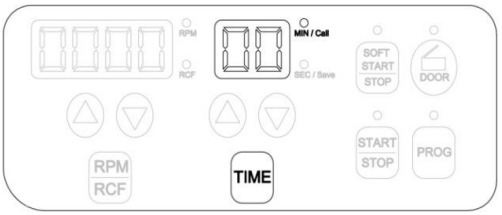

2. Press the [▲▼] buttons to change input value.
   - ➢ After keeping holding finger on the [▲▼] buttons for 5 seconds, the unit of setting value is changed to 10min from 1 min.
3. Press the [TIME] button again for saving.

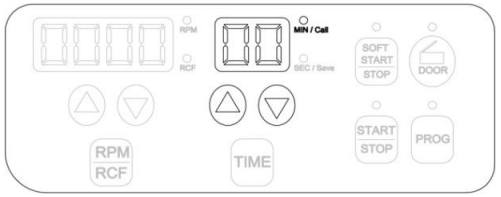

5-3-1. Setting SEC

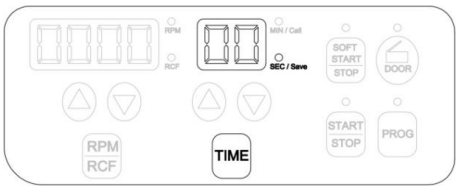

1. Press the [TIME] button twice.
   - ➢ Seconds MODE is generated by pressing a [TIME] button twice.

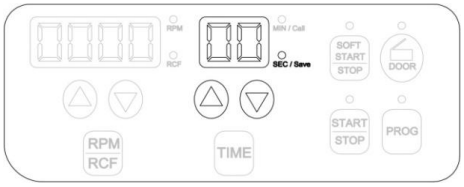

2. Press the [▲▼] buttons to change input value.
   - ➢ After keeping holding finger on the [▲▼] buttons for 5 seconds, the unit of setting value is changed to 10 sec. from 1 sec.

3. Press the [TIME] button again for saving.

5-4. Start/Stop

Action

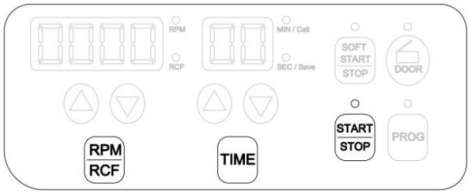

1. After setting RPM/RCF and Time, press [START/STOP] button.
   - ➢ During running, a 'Start LED' is turned on.
   - ➢ In case of pressing the [START/STOP] button while running, the running is stopped.

5-5. SOFT Start/Stop

The function of [SOFT Start /Stop] button is gentle acceleration and deceleration for the sensitive samples.

Action

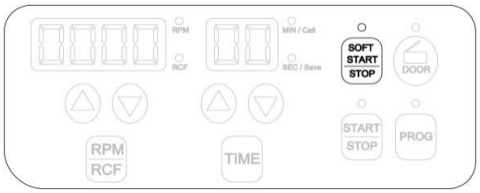

1. After setting Time and RPM, press the [SOFT Start /Stop] button once.
   - ➢ The LED of [SOFT Start /Stop] button is turned on during running.
   - ➢ The Door is opened automatically when the instrument is completely finished.
   - ➢ When the instrument is running with this function, it is not possible to stop running by pressing normal [START/STOP] button.

5-6. Program Saving & Recalling

Action

5-6-1. Saving

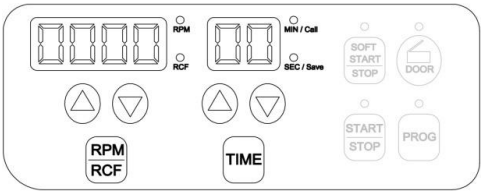

1. Set parameters. (Refer to 5-2 ~ 5-3)

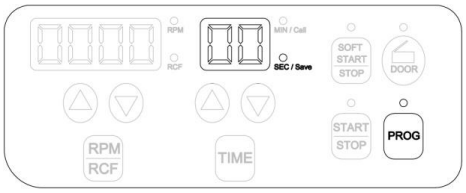

2. Press the [PROG] button longer than 3 seconds to save your preferred set values.
   - The LED of [PROG] button and SEC/Save are turned on.

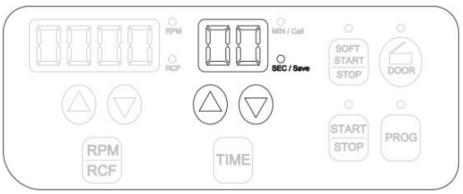

3. Input the program number by using [▲▼] button.
   - Save up to 10 programs

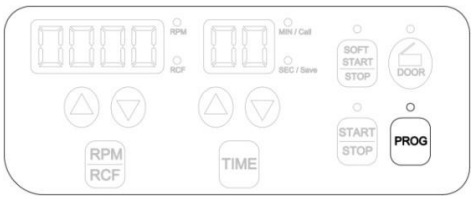

4. Press the [PROG] button again to complete the saving.
   - The setting value is saved
   - If you do not press the [PROG] buttons for 5 second, the setting mode is cleared.

5-6-2. Recalling

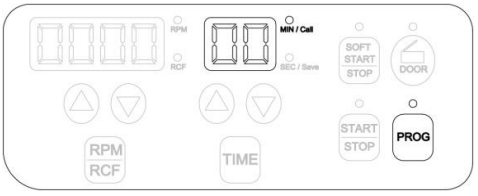

1. To recall the saved program, just press the [PROG] button shortly.
   - The LED of [PROG] and MIN/Call are turned on.

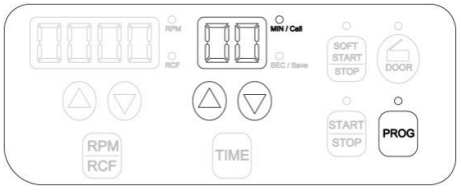

2. Check the program number to call and enter the program number you want to recall by pressing [▲▼] button.

3. Press [PROG] button once again.
   - The setting values are displayed according to your saved number.
   - If you do not press the [PROG] buttons for 5 second, the setting mode is cleared.

5-7. Emergency Door Open

For emergency door open, you can use the Emergency Door Open Tool as long as the instrument is completely stopped.

The door can be unlocked manually with Emergency Door Open Tool through the emergency opening hole.

1. Find the emergency hole on the left side of the instrument
2. Insert the Emergency Door Open Tool into the hole and push it until the door is released.

Manual opening should be performed only when spinning is completely stopped. Otherwise, harmful damage will be accompanied to not only operators but samples.
After opening the door manually, it is recommended to wait until normal electricity comes back.

5-8. Fuse replacement

When the power is not turned on, please check the connection of power consent / power switch.
Replace the fuse as following instruction, if the power is still not turned on.

Action

1. Separate the AC Power Cord at the back of the instrument and push the flat-head screwdriver for bring out the fuse case.

2. Replace the damaged fuse with new one from the fuse case and then connect in the power.

6. Maintenance

6-1. Outer part of instrument

1. Clean the outside of the instrument with dry soft cloth. If necessary, dip the cloth in neutral detergent and clean contaminated area. Keep completely dry after cleaning.
2. Do not use any volatile chemicals such as alcohol and benzene, etc.
3. Be careful not to make scratches on the surface of the instrument. The scratches can cause corrosion on the surface of the instrument.

✓ If any rust appears, clean it with neutral detergents and keep dry.

6-2. Chamber

1. Keep dry inside the chamber after every use.
2. If the chamber is contaminated, dip the cloth in neutral detergent and clean contaminated area.

6-3. Shaft

1. Always make special attention to clean the motor shaft to avoid any imbalance problem due to the contaminants.
2. After using the instrument, take out the rotor from the shaft, and clean the shaft with dry soft cloth to keep dry.

6-4. Rotor

1. If any parts are contaminated with samples, clean the rotor with soft wet cloth and keep the rotor dry.
2. Be careful not to make scratches inside or on the surface of rotors. Any small scratches can cause corrosion of the rotor and big damage to the instrument.
3. If you do not use the instrument, keep the rotor separately from the motor shaft and stand it upside down.

6-5. Transportation of the instrument

1. If you need to move or ship the instrument, be cautious to protect the motor shaft from any physical impact or turbulence.
2. Do not mount a rotor in any cases of movement. Fill inside the chamber with proper materials to keep the motor shaft on place and not to be influenced by physical pressure.

7. Trouble Shooting

7-1. Check list

Symptom	Check list
Power failure	Connect the AC Power cord and make sure that the line is completely connected between the instrument and power outlet. Check the power switch is turned on. (Please refer to 4-1. Power On/off and Door Release)
Can't be started	If the door is not closed completely, the instrument can't run. Check the Door LED on the display window and close the door completely.
Can't open the door	If the power is out, check the main fuse for the laboratory to supply the power. If it is not solved in shortly, open the door with the Emergency Door Open Tool manually for safety of sample. (Please refer to 5-7. Emergency Door Open)
Can't close the door	Remove the dirt at the door latch and then close the door completely again. If the door seems not being closed by mechanical reason, please contact our service team.
Noise and vibration during running	Please check the balanced status of both the table and the instrument.
	Please re-check the coupling status of the following three matches to minimize the noise 1. the balanced way of coupling of the rotor into the motor shaft 2. the completeness of fixing of the Rotor Locking Nut on the rotor 3. the matching status of Rotor Lid with the rotor (Please refer to 4-2. Rotor Coupling and Disassembling)
	Check balances of samples in the rotor. (Please refer to 4-3. Positioning of Sample Tubes) and load the same weight of samples symmetrically.

7-2. Error Code

If the instrument shows the error code with beeping sound, press [STOP] button to stop the beeping sound and press [Enter] button to release of the error status and make the instrument go to the default setting again.

Error	Possible Causes	Actions
Error 1 or Error 9	RPM Sensor	- Shut off the power supply, and then, turn on the power switch again to check the instrument. - If the error code shows continuously although you try to operate again, please call Gyrozen Field Service Engineer.
Error 2	Door	- If the door is not closed completely, this message is appeared. -Remove the dirt at the door latch and then close the door completely again. Check the Door LED on the display window. If it is not solved in shortly, open the door with emergency door tool manually for safety of sample. (Please refer to 5-7. Emergency Door Open)
Error 3	Motor Overheating	- If the motor is overheated, this message is appeared. -Shut off the power supply for an hour, and then turn on the power switch for checking the instrument. - If the error code shows continuously, please call Gyrozen Field Service Engineer.
Error 4	Low Voltage	- If the power input of Power supply (V/Hz) is 10% less than required power, this message is appeared. - Shut off the power supply and then check the voltage of the Power supply (V/Hz). - Use AVR to provide proper power.
Error5	High Voltage	- If the power input of Power supply (V/Hz) is 10% more than required power, this message is appeared. - Shut off the power supply and then check the voltage of the Power supply (V/Hz). - Use AVR to provide proper power.

Error 6	Over Speed	- If the instrument is spun with over speed, there will be some problems in the overload of motor and the output of motor. - Shut off the power supply, and then, turn on the power switch again to check the instrument.
Error 7	Software	- If the installed software has bugs, this message is appeared. - Tuning the firmware (Download)*
Error 8	Imbalance	- Check weight-balances of samples (Please refer to 4-3. Positioning of Sample Tubes) and then turn off and on the instrument for checking.

* Any wire disconnection or tuning of the instrument must be performed only by a service engineer who is authorized by GYROZEN Co., Ltd.

8. Rotors and Accessories

Swing Rotor, GRS-S-100-4

4 loadings
∧ 90°

Bioseal Bucket with O-ring

Bioseal 100 ㎖ Bucket
GLB-b100-100
Bucket bore (ΦxL, mm) : 47 x 99
Radius(mm) : 155.1
Max. RPM : 4,000
Max. RCF(g-force) : 2,774
Max height for tube fit(mm) : 114 (w/ cap) / 130 (w/o cap)

Tube										
Tube capacity(㎖)	1.5-2.0	2.6-7	4-10	9-15	15 ㎖ conical	15 ㎖ conical	50	50 ㎖ conical	85	100
Tube rack / Adaptor										
Cat. No.	GAM-m2.0-6 (b100)	GAM-7-5 (b100)	GAM-10-5 (b100)	GAM-15-3 (100)	GAM-c15-3 (100)	GAS-c15 (b100)	GAS-50 (b100)	GAS-c50 (b100)	GAS-85 (b100)	GAS-100 (b100)
Rack capacity(ea/4)	6/24	5/20	5/20	3/12	3/12	1/4	1/4	1/4	1/4	1/4
Hole dimension (ΦxL, mm)	11 x 39	13.5 x 60	16 x 60	17.5 x 105	17.2 x 106.5	17.2 x 106.5	29.5 x 95.9	30 x 100	38.5 x 96.4	44 x 106.4

■ (b100) adaptors work fine with bioseal capping but (100) adaptors

Vacuutainer Bucket

Vacuutainer 10 ㎖ Bucket
GLB-10-8-100
Bucket capacity : 8/ea
Bucket bore (ΦxL, mm) :16 x 89
Radius(mm) : 155.1
Max. RPM : 4,000
Max. RCF(g-force) : 2,774
Max height for tube fit(mm) : 120

Tube	
Tube capacity (㎖)	10
Bucket capacity (ea/4)	8/32

Swing Rotor, GRS-S-50-4

4 loadings
90°

Round 50 mℓ Bucket GLB-50-50	Tube				
Bucket bore (Φx L, mm) : 30.5 x 91	Tube capacity(mℓ)	15	15 mℓ conical	50 mℓ conical	50
Radius(mm) : 151.5	Adaptor				None
Max. RPM : 4,000	Cat. No.	GA5-u15(50)		GA5-c50(50)	-
Max. RCF(g-force) : 2,700	Adaptor bore (Φ, mm)	17.3 x 87		29.5 x 17.5	-
Max height for tube fit(mm) : 125					

Dual 15 mℓ Bucket GLB-d15-50
Bucket capacity : 2/ea
Bucket bore (Φx L, mm) : 17 x 91.5
Radius(mm) : 151.5
Max. RPM : 4,000
Max. RCF(g-force) : 2,700
Max height for tube fit(mm) : 120

Tube	
Tube capacity (mℓ)	15
Bucket capacity (ea/4)	2/8

Swing Rotor, GRS-5-mw-2

2 loadings
∧ 90°
Area dimension (mm) : 86.3 X 130.3
Max height for microplate fit (mm) : 35

Plate	
Plate capacity(mℓ)	MTP
Rotor capacity(ea/2)	2/4
Radius(mm)	111
Max. RPM	4,000
Max. RCF(g-force)	1,986

Angle Rotor, GRA-5-15-16

16 x 15 mℓ
∧ 45°
Hole diameter (mm) : 18
Max height for tube fit (mm) : 130

Stainless steel 15 mℓ sleeves
GLB-15-FA
Sleeve bore (Φx h, mm) : 18 x 97.5
Radius(mm) : 151.5
Max. RPM : 4,000
Max. RCF(g-force) : 2,700

Tube						
Tube capacity(mℓ)	3	4	5	10	15	15 mℓ conical
Adaptor				None	None	None
Cat. No.	GAS-3(15)	GAS-4(15)	GAS-5(15)	-	-	-
Adaptor bore (ΦxL, mm)	13.5 x 61	13.5 x 65	13.5 x 85	-	-	-
Radius(mm)	134	136	146	150.5	151.5	147.5
Max.RPM	4,000					
Max.RCF(g-force)	2,397	2,433	2,692	2,638	2,700	2,700

9. Product Range

10. CE

Doc No. : STC-A08-113 / KEL08-C10032

EC Declaration of Conformity

We, **Gyrozen Co., Ltd.**
B-Station, 544-1, Bongmyeong-dong, Yuseong-gu, Daejeon 305-301, Korea
declare under our sole responsibility that the product ;

Description of Equipment : **Centrifuge**
Model Name : **416**

to which this declaration relates is in conformity with the following standards or other normative documents;

EN 61010-1(2001) Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1 : General requirements
EN 61010-2-020(2006) Safety requirements for electrical equipment for measurement, control, and laboratory use
- Part 2 : Particular requirements for laboratory centrifuges
EN 61326-1(2006) Electrical equipment for measurement, control and laboratory use – EMC requirements
EN 55011(2007) Industrial, scientific and medical (ISM) radio-frequency equipment Radio disturbance characteristics Limits and methods of measurement

following the provisions of Directives ;

2004/108/EC Directive 2004/108/EC of the European Parliament and of the Council of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC
2006/95/EC Directive 2006/95/EC of the European Parliament and of the Council of 12 December 2006 on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits

Issued date : November 11, 2008

Confirmed by Kim Sun Ki
Sun-Ki Kim President